



ASSEMBLY INSTRUCTION

XLR Chassis TOP


NC*FDX-TOP with SCFDX-TOP
NC*MDX-TOP with SCMDX-TOP

IP65 RATED AND UL50E APPROVED.

1 Connector installation


Any TOP XLR
chassis connector

4x
Screws

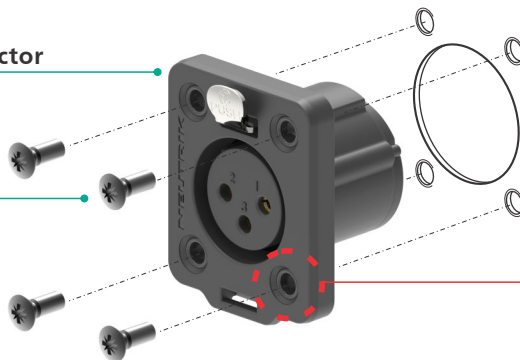

ATTENTION:
Tightening torque
 $M_A = 40 \text{ Ncm}$

Equipment / Panel

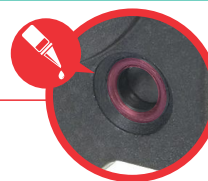


Lubricate O-Gasket
with silicon on all
4 screw holes.


2 Mount the sealing cover



A Insert the ribbon through
the dedicated slot.

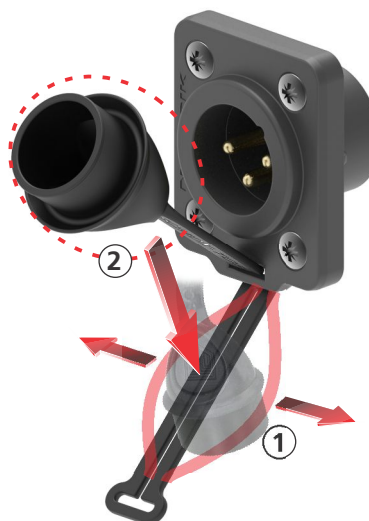


B (1) Split the ribbon and
(2) put through the cover.

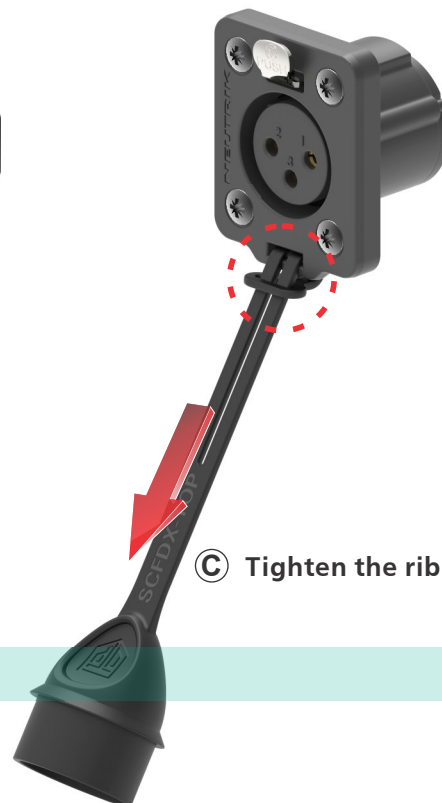


C Tighten the ribbon

3 Panel Cutout (Rear Side)

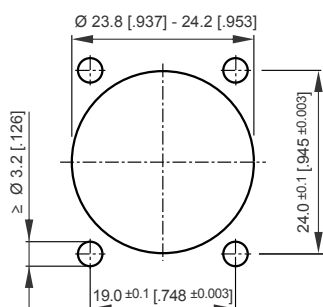

4 Recommended screw

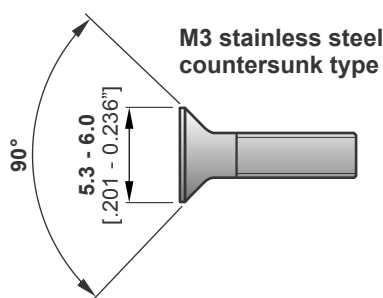

Find more details of
XLR Chassis on
www.neutrik.com.



Neutrik AG
Neutrik USA Inc.
Neutrik (UK) Ltd.
Neutrik Vertriebs GmbH

LI
USA
UK
DE/NL/AT/DK

T: +423 / 237 24 24
T: +1 704 / 972 3050
T: +44 1983 / 811 441
T: +49 8131 / 280 890

F: +423 / 232 53 93
F: +1 704 / 438 9202
F: +44 1983 / 811 439
F: +49 8131 / 280 830

Neutrik France
Neutrik Tokyo Ltd.
Neutrik Hong Kong Ltd.
Neutrik India Pvt. Ltd.

FR
JP
HK
IND

T: +33 1 / 4131 6750
T: +81 3 / 3663 4733
T: +852 / 2687 6055
T: +91 / 982 05 43 424

F: +33 1 / 4131 0511
F: +81 3 / 3663 4796
F: +852 / 2687 6052
F: +91 / 22 26163 540

Draft. Nr.: BDA 553 V2 | Update: 07.06.2019 Data subject to change without prior notice. © 2018 NEUTRIK®. NEUTRIK® are registered trademark of NEUTRIK AG. ALL RIGHTS RESERVED.

www.neutrik.com

NEUTRIK